




HABITAT PERGOLA

SLATTED WALL ASSEMBLY INSTRUCTIONS

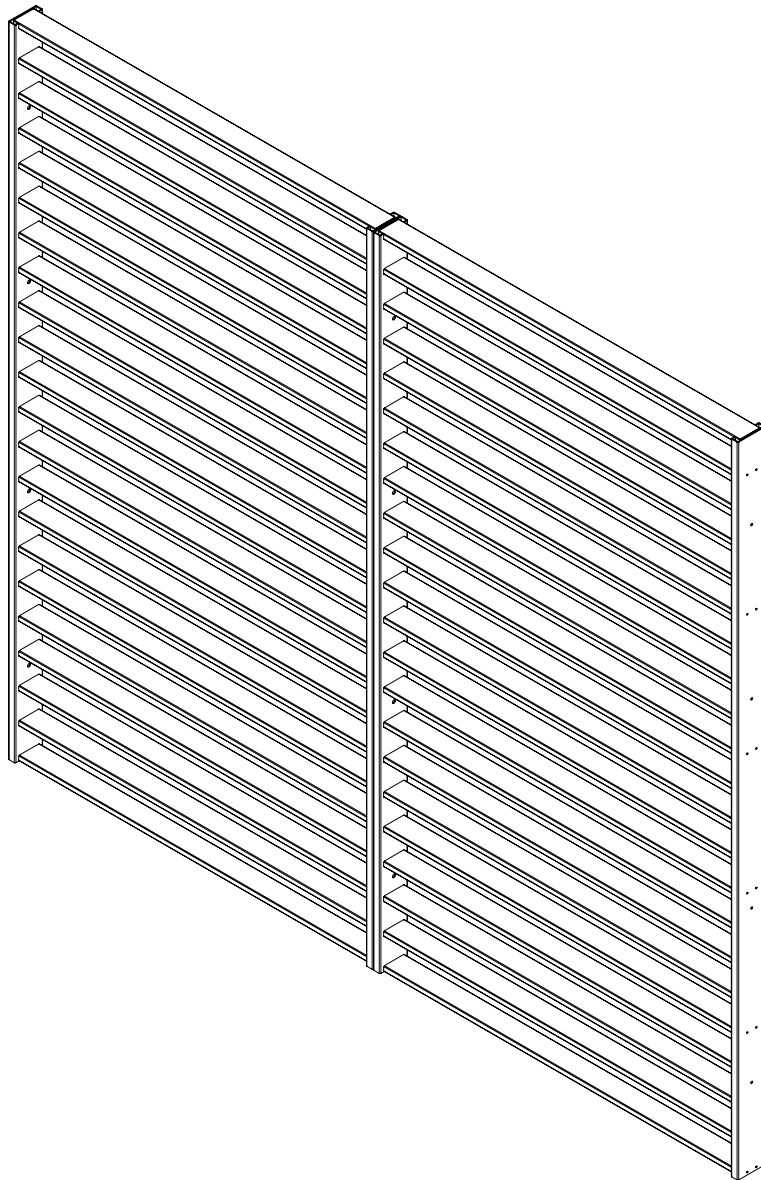

WARNINGS

IMPORTANT SAFETY INSTRUCTIONS, PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND RETAIN FOR FURTHER REFERENCE.

SAFETY AND PREPARATION

- This pergola is heavy and requires three adults to assemble safely.
- Do not attempt assembly during strong winds, rain, or storms. Choose a calm, dry day for your project.
- Check for underground utilities (pipes, cables, wires) before you begin. If unsure, contact your local utility company before digging or drilling.
- Always wear safety goggles, work gloves, and closed-toe shoes when using tools or handling aluminum parts.
- Aluminum edges can be sharp. Handle all components with care.
- If using a ladder, ensure it's on a flat, stable surface and have someone hold it steady if possible.
- Keep children and pets away from the work area during assembly.
- Only use the tools listed in the "Tools Required" section. Using incorrect tools may be hazardous and could damage the pergola.
- Do not hang heavy objects from the pergola. It is designed to support its own structure and lightweight decorative items only.
- Make sure the area where you're building is level, solid, and stable. If the ground is uneven, you must level it before beginning.
- Read all instructions completely before starting. Understanding the process ahead of time helps prevent mistakes.
- Confirm that you have all parts listed in the "Parts List." If anything is missing or damaged, call our customer service line at 1-(941) 323-9902.
- Clear the work area of any furniture, plants, or obstacles before starting.
- Lay out all parts in order to make them easy to locate during assembly.
- Take your time. Building a pergola requires a few hours — do not rush.

Note: Because flooring materials vary, hardware for anchoring to the ground is not included.

TOOLS REQUIRED


- Measuring tape
- Spirit level
- Power drill with appropriate bits
- Allen key set
- Phillips and flat-head screwdrivers
- Ladder

PART LIST

		SIZES	
CODE	PARTS	10 ft	13 ft
A	Slatted Panel	2	3
B	Cross Head 4.8 x 38mm	8	8
C	M6 x 50mm Bolt	4	8
D	M6 x 12mm Nut	4	8


STEP 1

Place your first panel into place, Pilot drill your hole as shown.

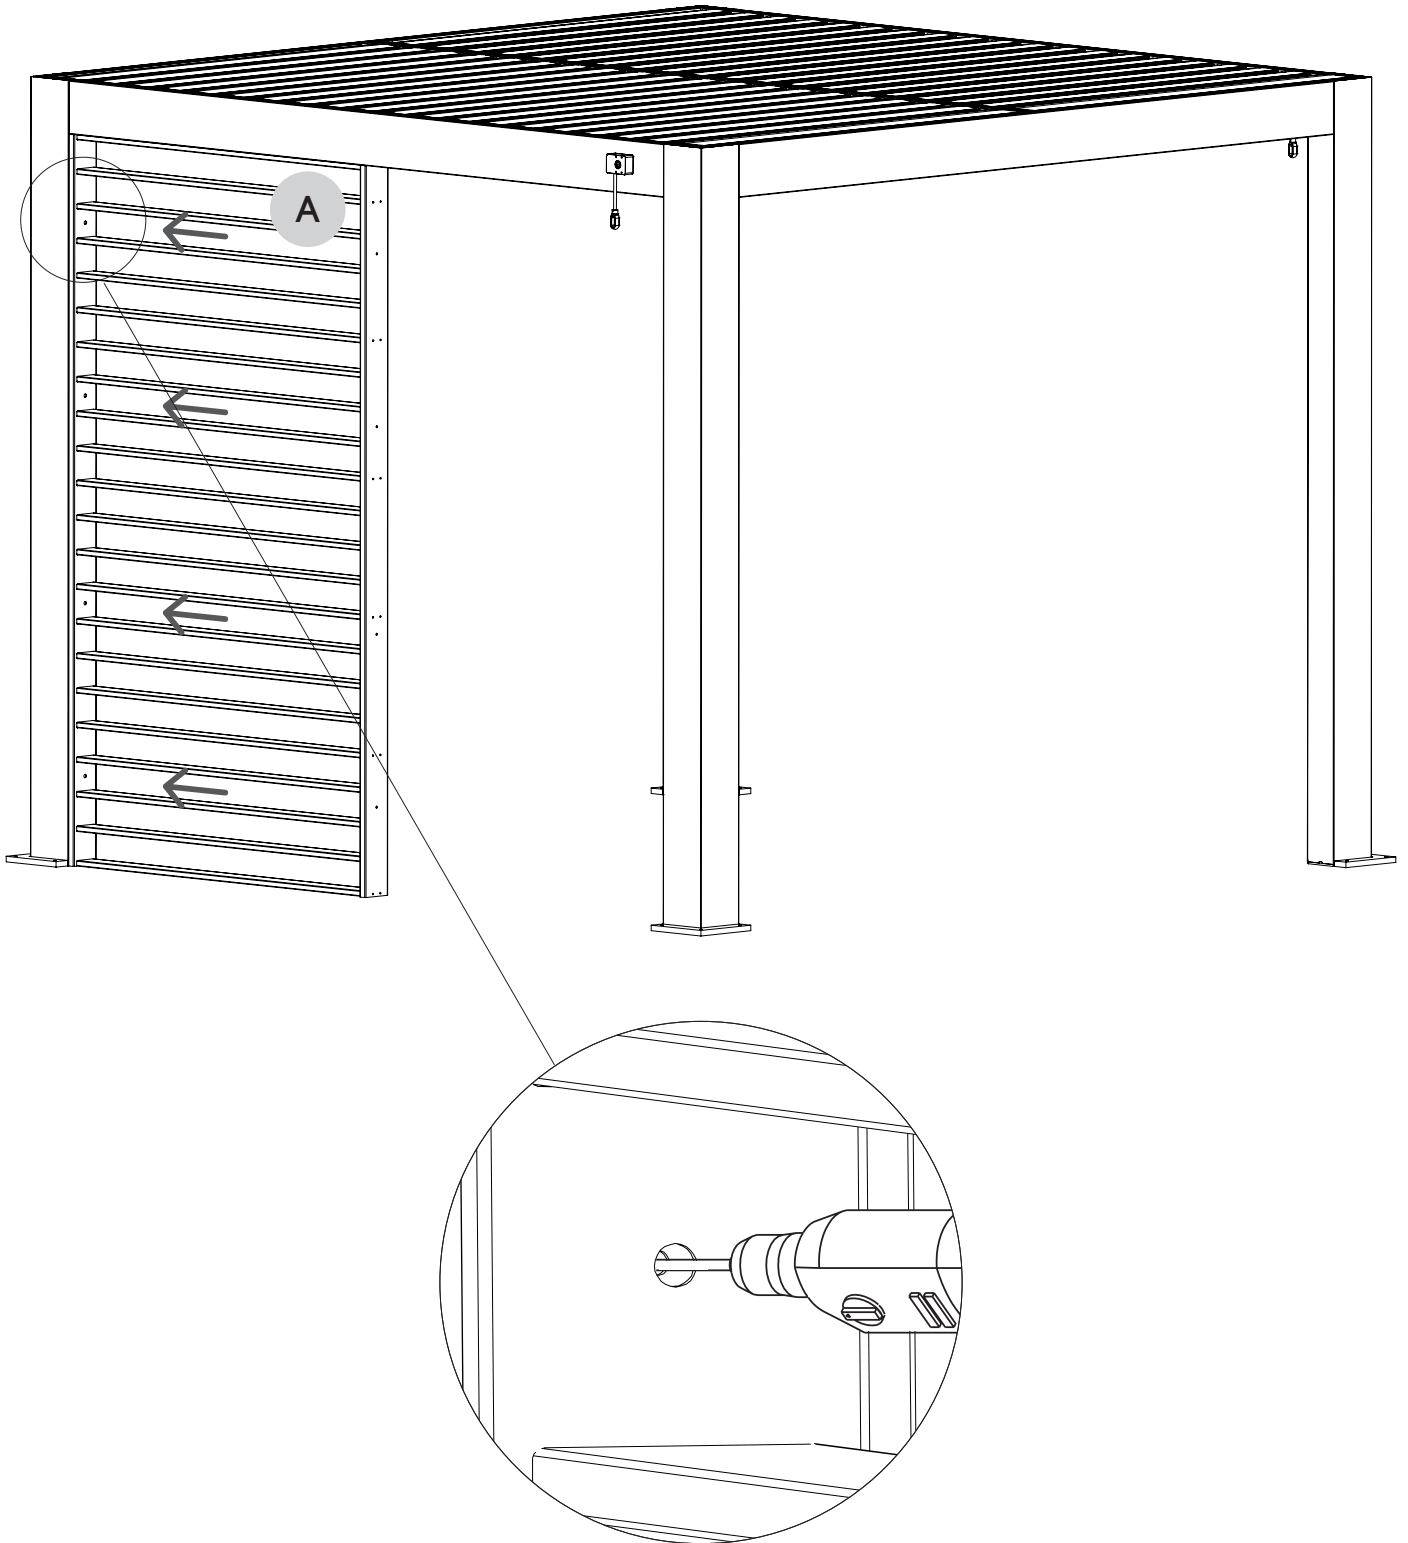


STEP 2

Secure the first panel to the link post using Screw (B)

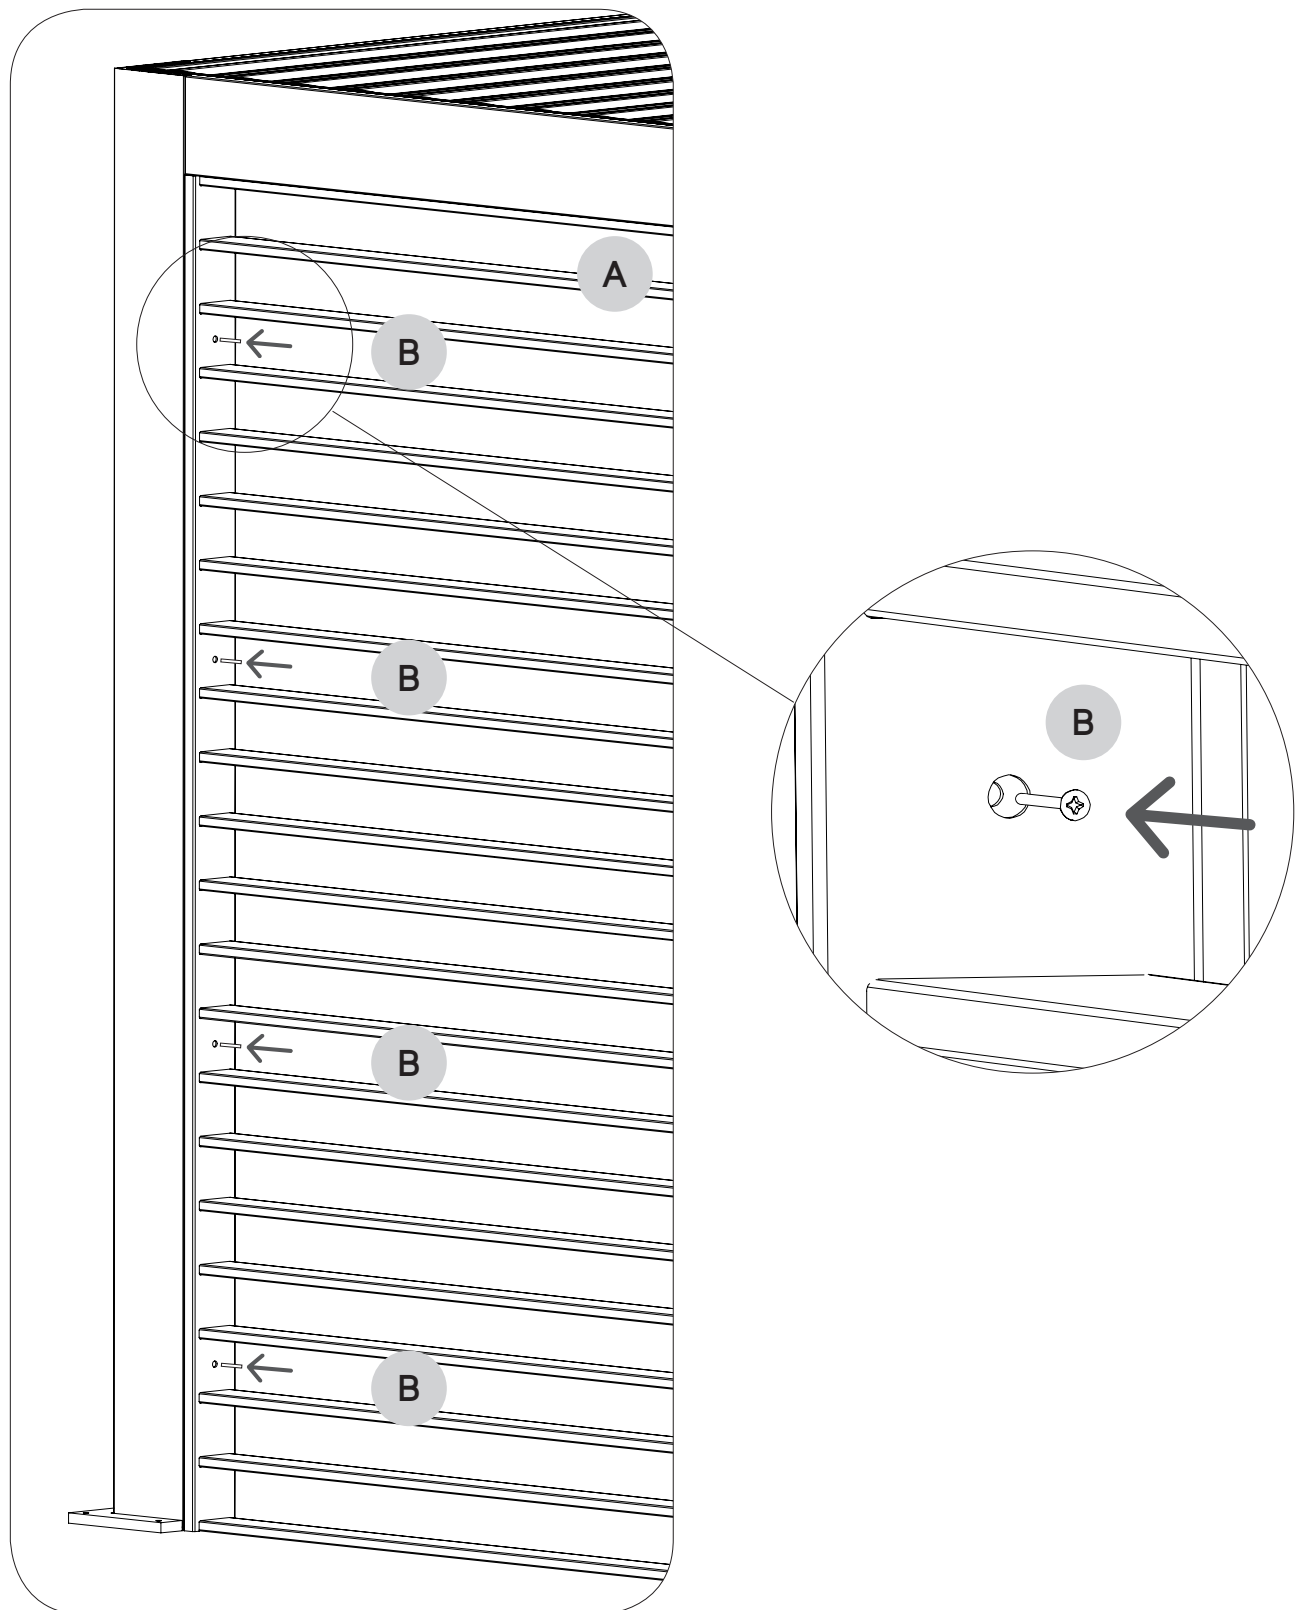


STEP 3

Place your Next Panel into place.

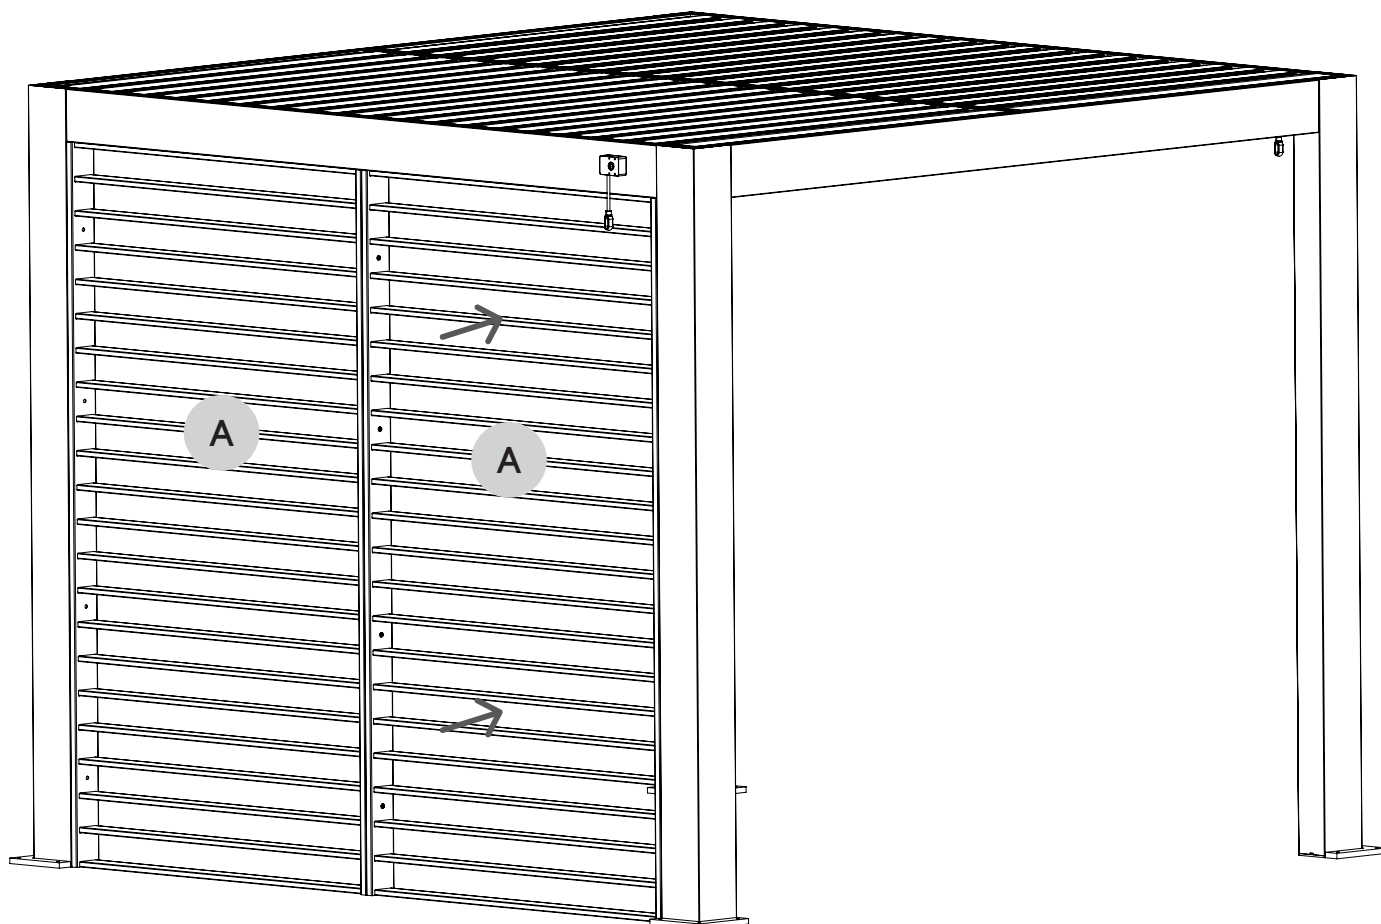


STEP 4

Next using Bolts (C) and Nuts (D) secure your panels together.

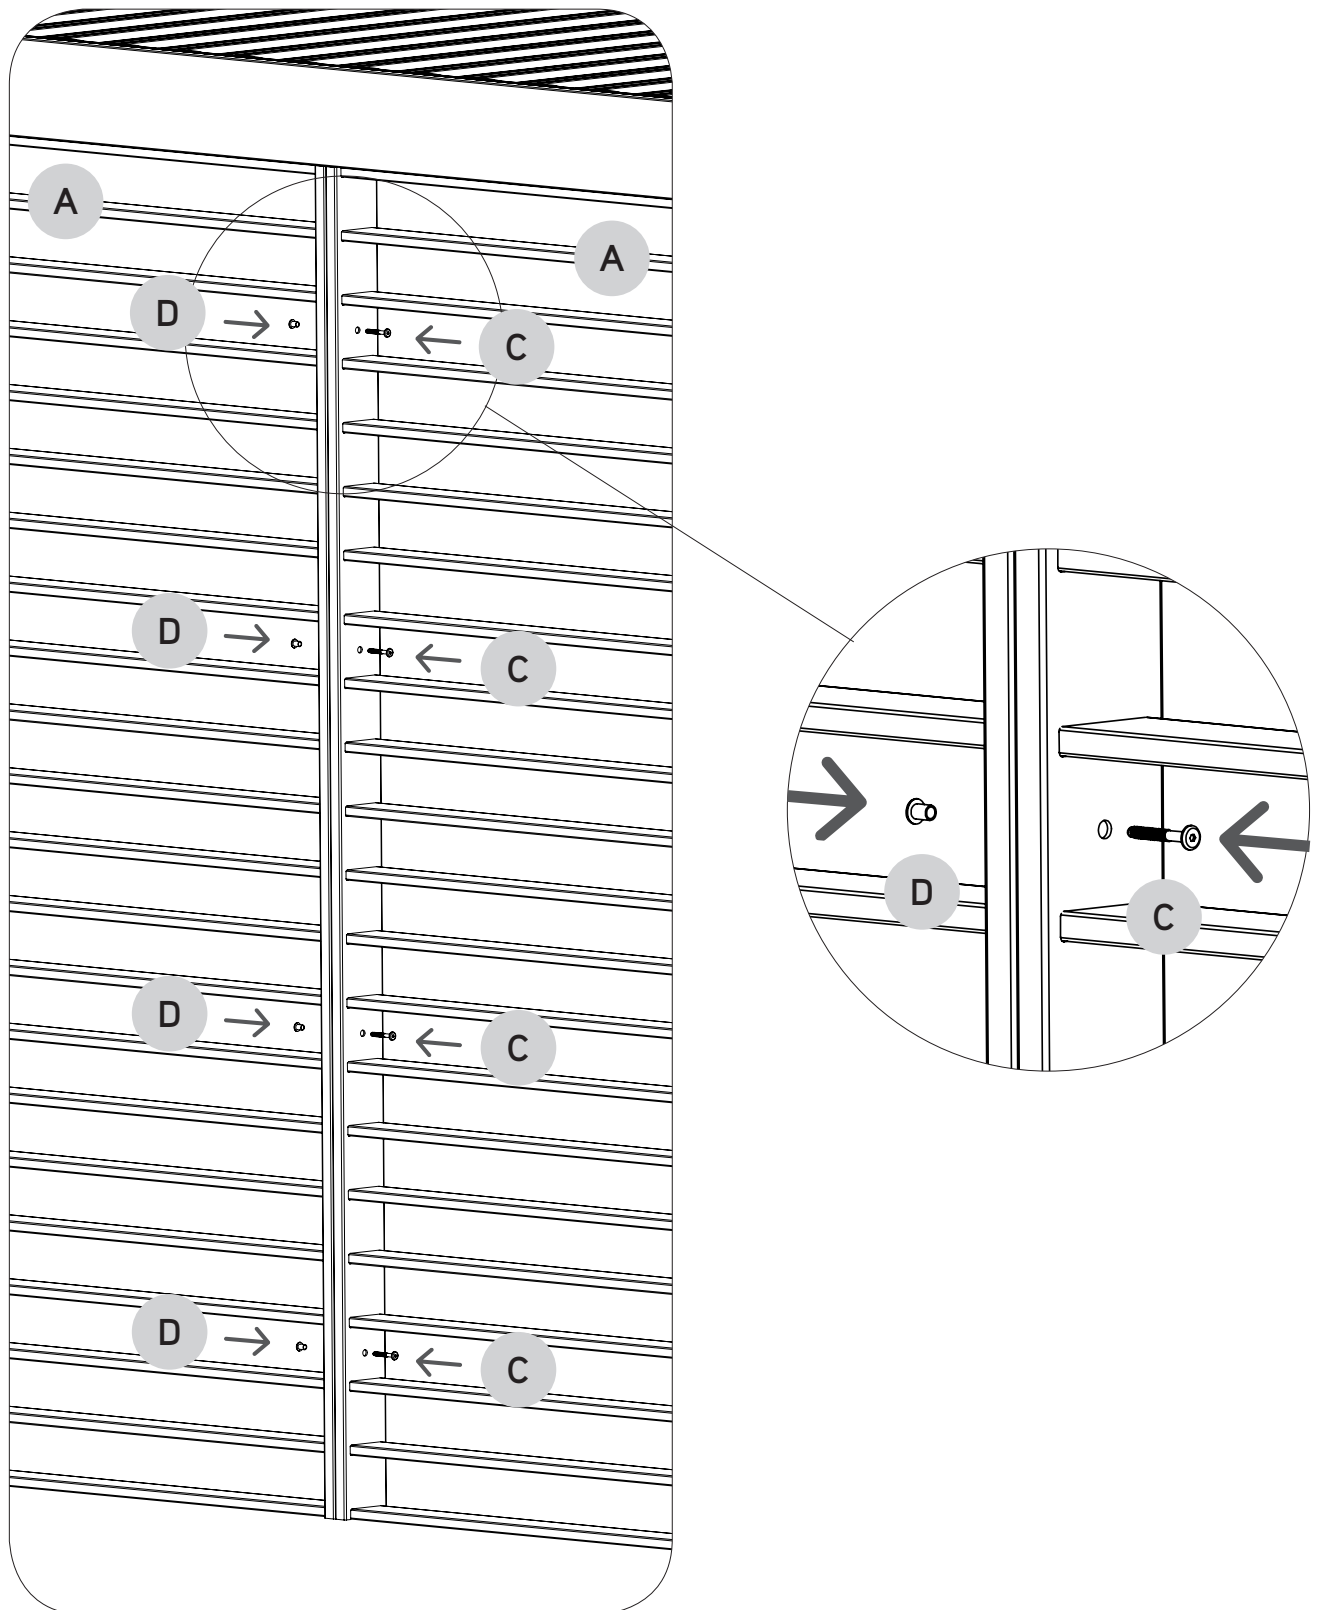

STEP 5

Once all of your Panels are secured to one and other, repeat Step 1 on the other side.

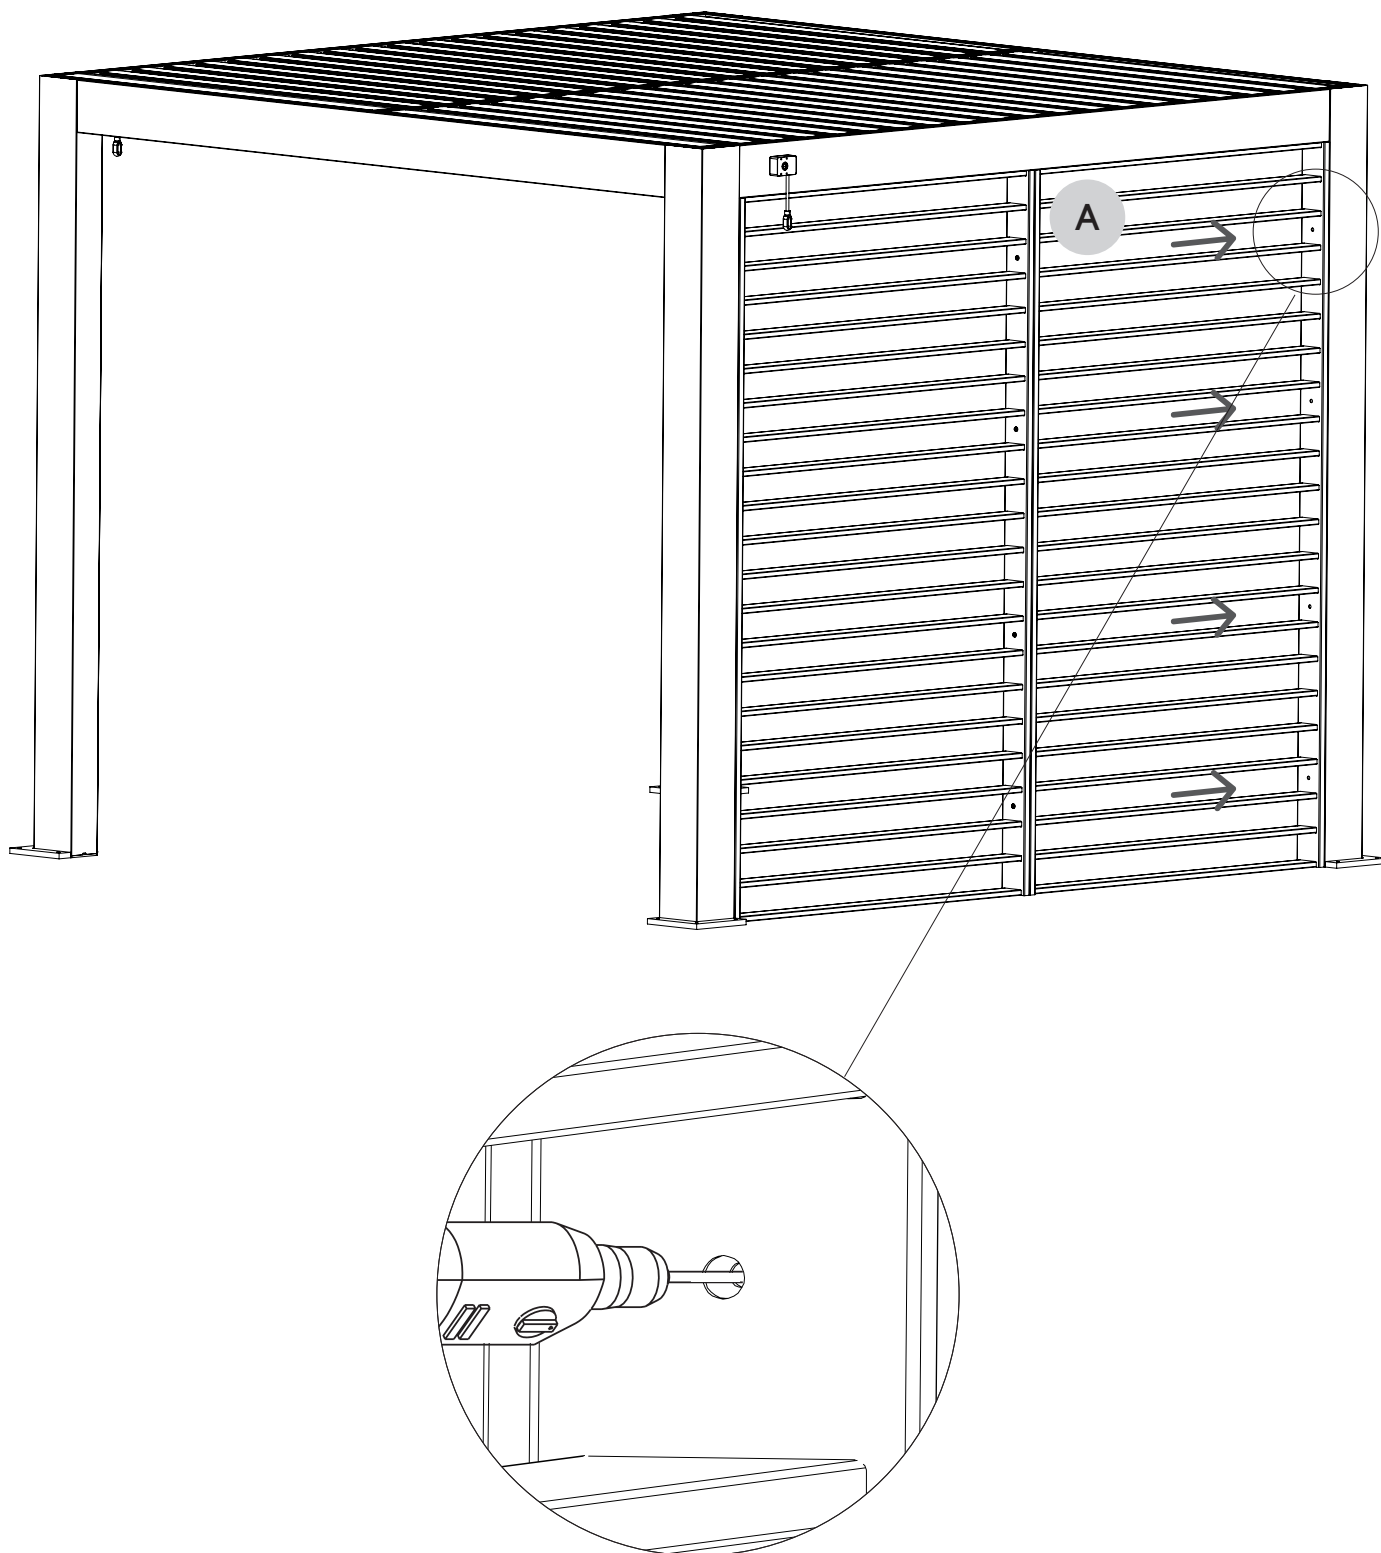

STEP 6

Secure your Panel Using
Screws (B).

